






# The sensors of loading chutes clogging (gumming) checking, capasitive –Д3Е-I71-...

ДЗЕ-I71-... series sensors are ideal for checking the loose materials level, including small and medium fractions. Sticking of material and accumulation of static electricity are excluded due to the spherical surface made of fluoroplastic.

ДЗЕ-I71-... series sensors are installed into the side or the cover of a loading chute (of a bunker) (2) at a height of a controlled level with the sensitive surface (3) directed toward the emergence of a checking object.


It is recommended to protect the sensor using a visor of mortise bracket  $N^01(4)$  or of attached bracket  $N^02(5)$  to avoid the damages caused by falling material.

The emergence of checking material in the actuation area (25 mm) causes a change of the logic signal of the sensor.

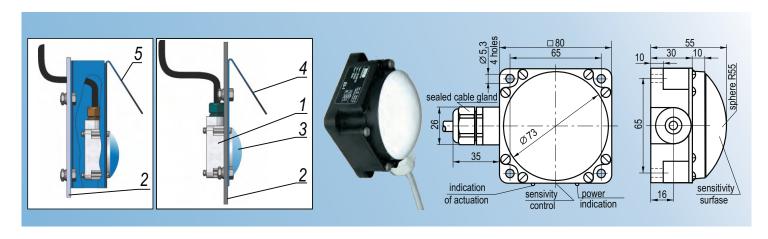

#### **Denomination -**ДЗЕ-I71-... series sensors 2-wire AC/DC voltage sensors SPECIFICATIONS: 4-wire DC voltage sensors ...43P ...11 ...43N ...12 The switching distance, mm Supply voltage, V 10...30 DC 20 ... 320 AC / 20 ... 250 DC Max. switching current, Imax mA 250 500 Residual current, I mA ≤5 Surge current when t=20 m/sec 3 A, f=1 Hz Surge current when t=20 m/sec ≤2.5 ≤7.5 high- temperature t=-15°...+105°C, in the sensor denomination specified as- BT Operating temperature range,°C typical execution t=-25°...+75°C, in the sensor denomination not specified low-temperature t=-45°...+65°C, in the sensor denomination specified as - HT Protection degree IP67 Cable connection, L=2 m 4x0,25 mm2 3x0,34 mm<sup>2</sup> When ordering other lengths, specify the number of meters in the end of the denomination (see example of notation) 80x80x55 Dimensions, mm 0,28 Sensor weight, kg

Wiring diagramms:

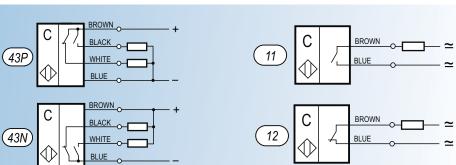


### **CONVEYOR AUTOMATION**




ДЗЕ-I71-... series sensors are available in several versions that differ from each other in connection diagrams, supply voltage, operating temperature ranges and cable length.

## Example of sensor notation in the documentation and orders:

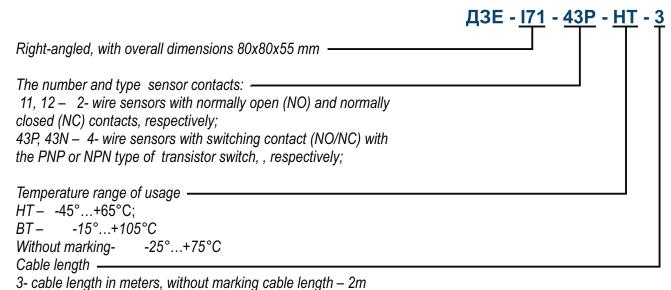

# Optional equipment for A3E-171-...series sensors

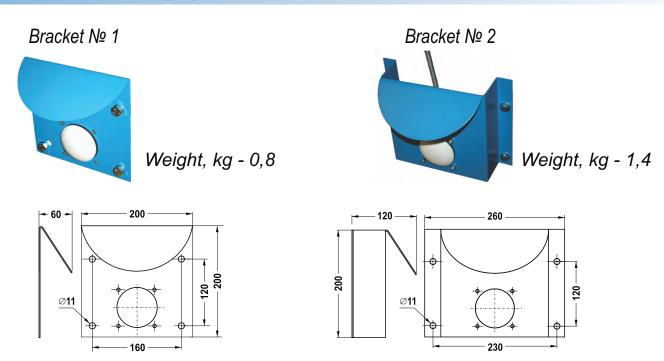

Brackets № 1 and № 2 are designed for installation of the Д3E-I71-...series sensors.

The visor of brackets provides sensors protection from the damages caused by materials falling from above.

Bracket № 1 is used with the «mortise» way of sensor installation, bracket № 2 is used with the «attached» one.

Brackets are shown with the installed sensors on the images.

\*If it is necessary to provide a delay of a switching of the ДЗЕ-I71-... series sensors it is recommended to apply the **Module ДЗ-2-24**, see the part of the catalogue 1.7 «The sensor of loading chutes clogging checking, ultrasonic - Optional equipment».